

Programming Remote Fobs

Additional hydraulic remote fobs are available from the dealer. You will need to program the remotes to work with your system. Anytime you program one remote, you will need to program them all in sequence. Follow these instructions for new remote fobs or existing remote fobs:



Shut off the system switch (Green Knob)

Remove the 4 screws and take off the cover off the receiver box.


Turn the power back on by turning the system switch clockwise.

Press and hold the Program Button until LED light illuminates then release the button.

Immediately press any button in sequence on all the remote fobs. The LED light will flash one time after the first fob, two times after the second fob, and three times after the third fob. You must program all the remotes at the same time.

5 seconds after pressing a button on the last remote fob, the LED will flash quickly. This indicates the programming is complete.

Test all the remote fobs. If everything is working properly, replace the receiver box cover.

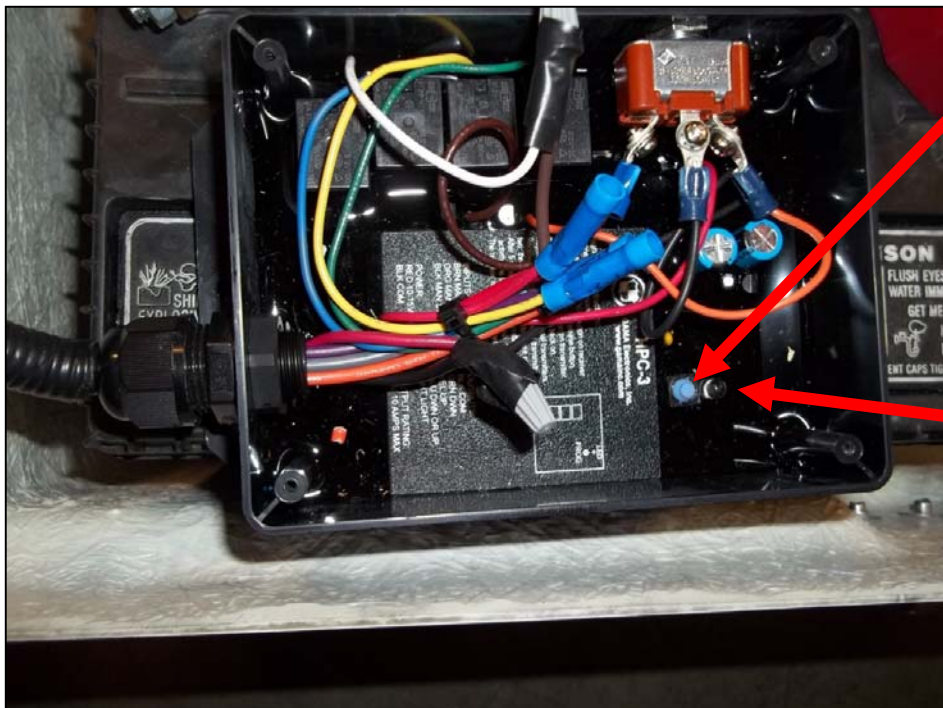

Program Button

LED Light